

Adjusting the Ez Hang Original

- (1) Raise or lower the height at the eye-bolt, via the overhead knot.
- (2) To adjust the incline, remove the overhead dowel. Move the brake back or forward equally on each side. Insert overhead dowel back into holder.

To fit optional armrest

- (1) Stand in front of chair and remove right front dowel from holder.
- (2) Slip short-sided webbing loop firmly over renowned dowel built-end. Make sure that webbing is taught and flat against the dowel. (Arc of armrest must face inward to the chair).
- (3) Insert dowel back into holder firmly
- (4) Repeat same procedure on right hand rear dowel and on the opposite side.

Washing and care instructions

Using soft brush and warm soap water scrub where dirty. Allow to dry on flat surface. **Not machine washable.**

Important Reminders

- (1) The eyebolt must be screwed completely into a pre-drilled 3/16 hole failure to adhere to this could result in injury.
- (2) The Ez Hang Original is mildew resistant but will fade in sunlight over time. We recommend storing the chair in the carry bag when not using for extended periods.
- (3) Spinning or swinging in both the chair and the footrest are not recommended. The eyebolt may loosen resulting in injury. Do not hang or pull on overhead dowel.

Please call our toll free customer service numbers (877)2424775 regarding any questions about our product.

