




Instructions for Assembly – Deluxe Wooden Series Chair

PLEASE GO TO www.ezhangchairs.com TO VIEW VIDEO

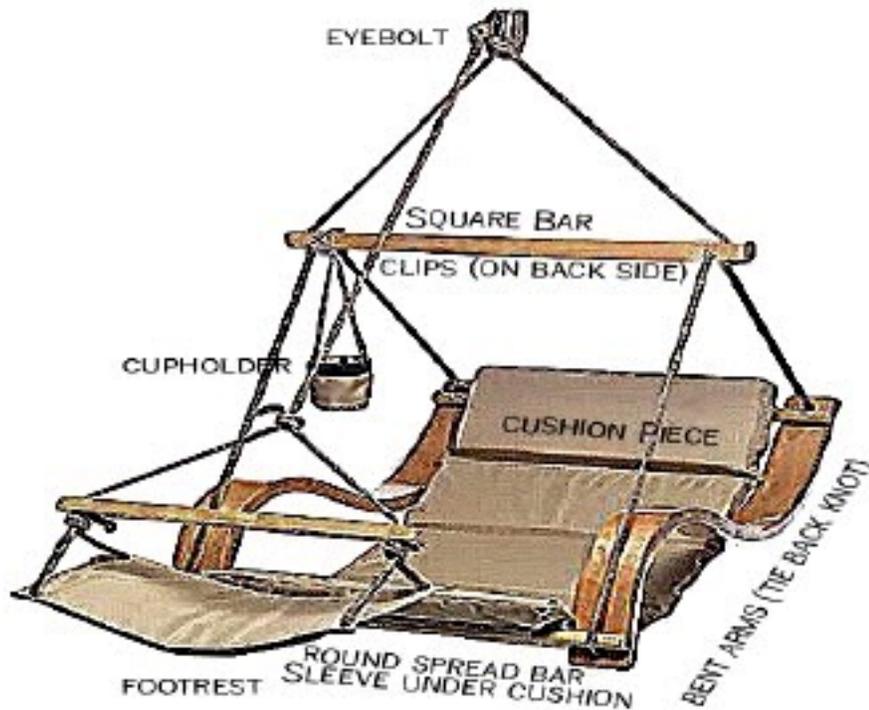

Assembly

Chair parts. Including:

- a.Center Cushion piece (1)
- b.Regular footrest with rope attached (1)
- c.Set of round spreader bars (2)
- d.Set of bent arms attached to overhead square bar via ropes (2)
- e.Small wooden dowel with knot attached at one end. This holds chase lounge out when in extended position (1)

f. Hardware package (2 extra small plastic brakes. Keep these for replacements if necessary)

g. 1” inch round black metal support poles for chase lounge extension (2)

h. Cup Holder (1) Happy bag (1)

***** IMPORTANT MAINTENANCE INFORMATION*****

The wood on your deluxe wood series is covered with a protective coat of polyurethane. We recommend annually reapplying polyurethane or any other protective varnish of your choice.

Place bent arms on the ground with knots in the back. Take the loose end of the rope on the right side and slide it through the hole at the top of the bent arm. Tie a small square knot just like the knot at the bottom of the arm. Repeat the process for the left side rope. (The small plastic brakes should be on the backside of the overhead dowel. If they are on the front, simply untie the front knot and reverse the brakes to the backside) Place the cushion part of the chair with the “EZ Hang” logo at the top right in between the bent arms on the ground and under all the ropes.

Thread the two round spreader bars through the sleeves on the backside of cushion (sleeve is on top and bottom of the main cushion.)

Align holes in spreader bars to holes in bent arms. Top spreader bar should be on the front side. Bottom spreader bar should be on the back side. Connect with hex bolt, washer and nut. (Washer and nut go on backside) Repeat for all four holes using the wrench provided and tighten until secure.

Slide the 1” inch round black support poles in each side of the chase lounge extension at the front of the chair and seal with the velcro cover to lock each pole in place. This provides stability for chase lounge when extended out.

To hold chase lounge out, insert small wooden dowel through sleeve at the end of chase lounge and tie a simple granny knot like the knot already tied at other end to secure it in place. To use chair with the chase lounge extended, hook smaller S hook already tied on to location where larger S hook is hanging the chair.

Chase lounge can either be extended out or tucked under the chair. If you desire it tucked under, simply use the two clips provided under chair and tuck excess rope into pouch using small velcro tab to secure. When tucked under use regular footrest. See picture below.

Eyebolt Installation

Locate ceiling joist (by Stud Finder or tapping and verifying with a small nail.) Be sure to locate exact center. Using a 3/16” (3mm) wood drill bit, drill a hole (approx. 4” (10CM)

deep) perpendicular to the ceiling. Screw in the two supplied eye lags until all threads have disappeared into the joist. Make certain the distance apart is approximately 49". Do not loosen or adjust once in place.

Important: Hole must be directly in the center of the stud for full weight bearing capacity. Spinning or swinging could loosen and compromise the eyebolt strength.

Fine tuning adjustment: Your chair can be adjusted back and forward by manipulating the side ropes on the overhead square bar. **The plastic clips must be on the backside of the square bar and must sit tight against the square bar once the re-cline has been set. This will stabilize your pitch. More rope towards the front tilts the chair forward resulting in a more upright position. More rope towards the back results in a more reclined position. Periodically check plastic clips for re-establishing position.**

Disclaimer

Please note: EZ HANG CHAIRS and all agents or representatives thereof cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of this product in a manner not expressly intended by the manufacturer. End consumer is ultimately responsible for verifying proper installation of eye-lag/hook assembly according to guidelines explained here within.

Eye lag Installation

Locate ceiling joist (by Stud Finder or tapping and verifying with a small nail.) Be sure to locate exact center. Using a 3/16" (3mm) wood drill bit, drill a hole (approx. 4" (10CM) deep) perpendicular to the ceiling. Screw in the two supplied eye lags until all threads have disappeared into the joist. Make certain the distance apart is approximately 49". Do not loosen or adjust once in place.

Important

Hole must be directly in the center of the stud for full weight bearing capacity. Spinning or swinging could loosen and compromise the eyebolt strength.

Fine tuning adjustment:

Your chair can be adjusted back and forward by manipulating the side ropes on the overhead square bar. **The plastic clips must be on the backside of the square bar and must sit tight against the square bar once the recline has been set. This will stabilize your pitch. More rope towards the front tilts the chair forward resulting in a more upright position. More rope towards the back results in a more reclined position. Periodically check plastic clips for re-establishing position.**

Disclaimer

Please note: EZ Hang chairs and all agents or representatives thereof cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of this product in a manner not expressly intended by the manufacturer. End consumer is ultimately responsible for verifying proper installation of eye-lag/hook assembly according to guidelines explained here within.

Deluxe Wooden Series version pictured below with extension tucked and secured underneath :





Regarding any questions about our products please contact your sales rep. or visit our website

www.ezhangchairs.com