



Instructions for Assembly – EZ HANG Wooden Love Seat Series

Regarding any questions about our products please contact your sales rep. or visit our website.

www.ezhangchairs.com

***** IMPORTANT MAINTENANCE INFORMATION*****

The wood on your love seat wood series is covered with a protective coat of polyurethane. We recommend annually reapplying polyurethane or any other protective varnish of your choice.

Eyebolt Installation

Locate ceiling joist (by Stud Finder or tapping and verifying with a small nail.) Be sure to locate exact center. Using a 3/16" (3mm) wood drill bit, drill a hole (approx. 4" (10CM) deep) perpendicular to the ceiling. Screw in the two supplied eye lags until all threads have disappeared into the joist. Make certain the distance apart is approximately 49". Do not loosen or adjust once in place.

Important: Hole must be directly in the center of the stud for full weight bearing capacity. Spinning or swinging could loosen and compromise the eyebolt strength.

To adjust the pitch of the Love Seat simply adjust the knots in the back of the Love Seat.

Place the square spreader bar with "S" hooks by hanging them on the chain above the "O Rings" at a comfortable height. Make sure the two center eyebolts are pointing downward as these can be used to attach footrests.

The chair should now be at a comfortable sitting height. Make sure that all the ropes are secure, knots are properly tied, and that the eye lags are properly installed. Also make sure all the bolts are tightened. Sit on the chair gently as it will stretch at first. You can always take up the slack at a later time.

Important Reminders:

- ✓ ■ The EZ Hang Loveseat is NOT a swing. We highly recommend using only

a gentle to and from motion.

- ✓ ■ Check the eye lag from time to time to make sure it's holding fast.
- ✓ ■ A periodic visual inspection of the ropes, hardware and other attachment hardware is recommended.
- ✓ ■ Use a readily available fabric protector on the pad and ropes to resist stains.
- ✓ ■ We highly recommend hanging no more than 18" above the ground.
- ✓ ■ The EZ Hang Love Seat has a rated load of 500 pounds.

Washing And Care Instructions:

Your EZ Hang Loveseat will last longer depending on its use, where it is installed and the care it is given. It will last longer if you keep it dry and store it indoors when not in use. To wash, scrub gently with a soft brush and a mixture of water and a mild laundry detergent.

Warning: Not suitable for washing machines, tumble dryers or chemical bleaches.

Parts and assembly of EZ Hang Love

- . a) Cushion piece (1)
- . b) Cup holders (2)
- . d) Set of spreader bars (2 bars)
- . e) Hardware pack with 8 hex head bolts, washers, 8 nuts
- . f) Eye lags, 2 S hooks, 2 sets of chains

- . g) Long rectangular overhead bar with 4 mini eyebolts

Place the 2 sculpted wooden arms about 50” apart on a flat surface and place the padded cushion between the upward sloping wooden arms. (Make sure the ropes are facing upwards.)

Slide the two long round spreader bars through the sleeves on the underside of the pad.

Locate and remove the 8 machine bolts, nuts and washers from the hardware bag. Insert the 8 bolts (2 for each corner of the chair) through the holes on the round spreader bars, lining them with the corresponding holes in the wooden arms.


Be sure the ropes are not tangled or caught behind the spreader bars. They must be free and clear when lifting the chair up.

After all the bolts are placed into the respective holes, thread the washers over the bolts, from the underside of the chair and then screw on the nuts. Tighten the nuts until the head of the bolts pull down into the holes in the front of the round wooden dowels. The head of the bolts should now be countersunk into the spreader bar.

With a person on each side, raise the chair onto the eye lags with the “S” hooks provided. If the eye lags are too high, use the chain provided to bridge the gap.

Disclaimer:

Please note: EZ Hang Chairs and all agents and representatives thereof cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of this product in a manner not expressly intended by the manufacturer. End consumer is ultimately responsible for verifying proper installation and eye lags according to our guidelines explained here within. We strongly recommend that you adhere to our maximum height recommendations.

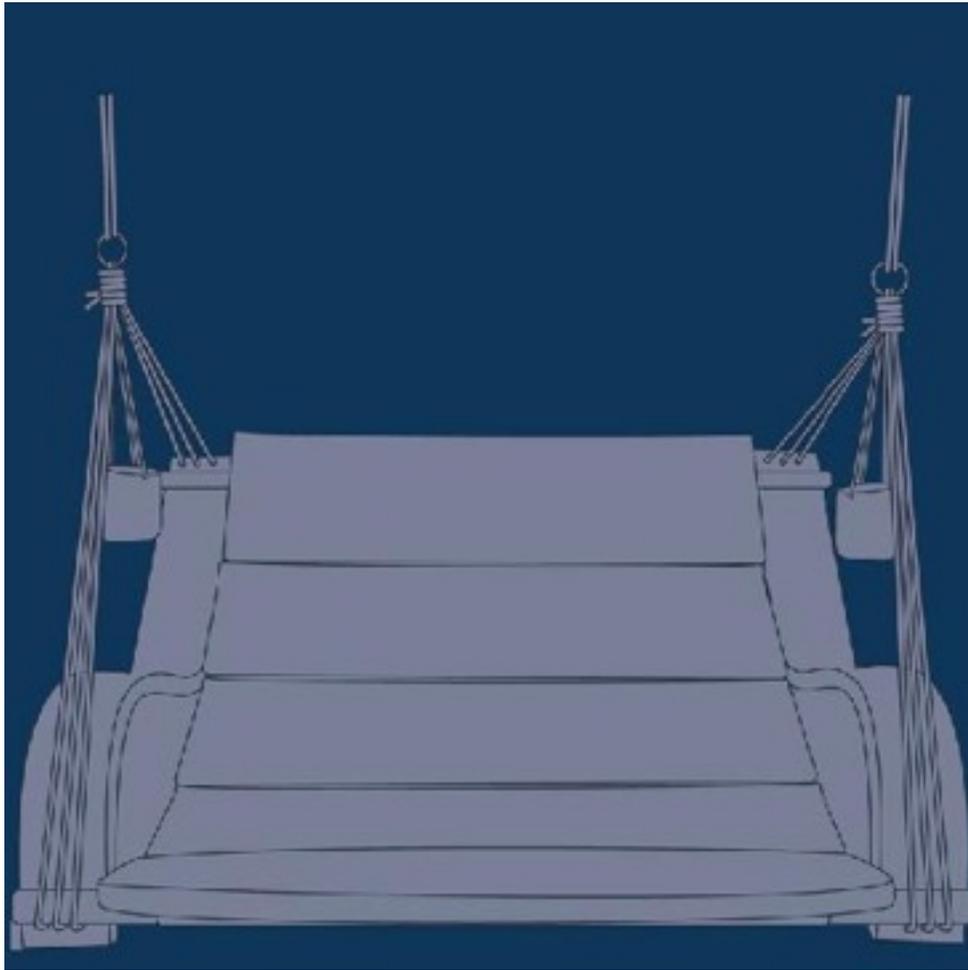

Regarding any questions about our products please contact your sales rep. or visit our website.

www.ezhangchairs.com