



Instructions for Assembly – EZ HANG Love Seat Wicker Series

Regarding any questions about our products please contact your sales rep. or visit our website.

www.ezhangchairs.com

Parts and assembly of EZ Hang Love Seat Wicker Series

- . a) Cushion piece (1)

- . b) Cup holders (2)

- . d) Set of spreader bars (2 bars) identical.

- . e) Third spreader bar used to hang foot rests and optional weather cover. This spreader bar will have holes in different location then the other 2 identical spreader bars. NOT TO BE USED TO HANG OR SUPPORT LOVE SEAT IN ANY FASHION. DO NOT HANG THE LOVE SEAT FROM THIS BAR.

- . f) Hardware pack: 8 hex head bolts,8 washers,8 nuts, 8 decorative plastic caps for nuts,2 eye lags,4 S hooks,1 set chains

Place the 2 S shaped wicker arms about 50” apart on a flat surface and place the padded cushion between the upward sloping wicker arms. (Make sure the ropes are facing upwards.)

Slide the two identical spreader bars through the sleeves on the underside of the cushion.

Locate and remove the 8 machine bolts, nuts and washers from the hardware bag. Insert the 8 bolts (2 for each corner of the chair) through the holes on the spreader bars, lining them with the corresponding holes in the wicker arms.

The back spreader bar located at the top of the cushion where your neck or head rests should be bolted to the front of the arms. The front spreader bar where your thigh rests can be bolted to the back side of the arms. You can however bolt both spreader bars to the front of the arms if you prefer.

Be sure the ropes are not tangled or caught behind the spreader bars. They must be free and clear when lifting the chair up.

After all the bolts are placed into the respective holes, thread the washers over the bolts, from the underside of the chair and then screw on the nuts. Tighten the nuts until the head of the bolts pull down into the holes in the front of the spreader bars. Cover with decorative caps. Using a rubber mallet to tap them in place helps with this process.

You are now ready to hang your chair. If you've purchased our Roman Arch, hang it from the eye bolts of The Roman Arch. If you are hanging it from the ceiling of your porch, or a joist or rafter from your covered deck, or any other fixed structure, you need to follow the **EYE LAG INSTALLATION** instructions below.

Eye Lag Installation

Locate ceiling joist (by Stud Finder or tapping and verifying with a small nail.) Be sure to locate exact center. Using a 3/16" (3mm) wood drill bit, drill a hole (approx. 4" (10CM) deep) perpendicular to the ceiling. Screw in the two supplied eye lags until all threads have disappeared into the joist. Make certain the distance apart is approximately 50". Do not loosen or adjust once in place.

Important: Hole must be directly in the center of the stud for full weight bearing capacity. Spinning or swinging could loosen and compromise the eyebolt strength.

With a person on each side, raise the chair onto the eye lags with the "S" hooks provided. If the eye lags are too high, use the chain provided to bridge the gap. Additional chain might be required as the chain provided is suited for use with The Roman Arc.

To adjust the pitch of the Love Seat simply adjust the knots in the back of the Love Seat. Loosening the knots and letting out some slack will recline the chair. Tightening the knots will push it forward for a more upright position.

The 3rd spreader bar is used to hang your footrests. That bar is attached to the chain with "S" hooks by hanging them on the chain above the "O Rings" at a comfortable height. Make sure the two center eyebolts are pointing downward as these are used to attach footrests and then make sure the two outer eyebolts are point upwards as these are used to hang the bar from the chain. This bar is also used to drape the optional weather cover over.

The chair should now be at a comfortable sitting height. Make sure that all the ropes are secure, knots are properly tied, and that the eye lags are properly installed. Also make sure all the bolts are tightened. Sit on the chair gently as it will stretch at first. You can always take up the slack at a later time.

Important Reminders:

✓ ■ The EZ Hang Loveseat is NOT a swing. We highly recommend using only a gentle to and fro motion.

✓ ■ Check the eye lag from time to time to make sure it's holding fast.

✓ ■ A periodic visual inspection of the ropes, hardware and other attachment hardware is recommended.

✓ ■ Use a readily available fabric protector on the pad and ropes to resist stains.

✓ ■ We highly recommend hanging no more than 18" above the ground.

✓ ■ The EZ Hang Love Seat has a rated load of 600 pounds.


Washing And Care Instructions:

Your EZ Hang Loveseat will last longer depending on its use, where it is installed and the care it is given. It will last longer if you keep it dry and store it indoors when not in use. To wash, scrub gently with a soft brush and a mixture of water and a mild laundry detergent.

Warning: Not suitable for washing machines, tumble dryers or chemical bleaches.

Disclaimer:

Please note: EZ Hang Chairs and all agents and representatives thereof cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of this product in a manner not expressly intended by the manufacturer. End consumer is ultimately responsible for verifying proper installation and eye lags according to our guidelines explained here within. We strongly recommend that you adhere to our maximum height recommendations.

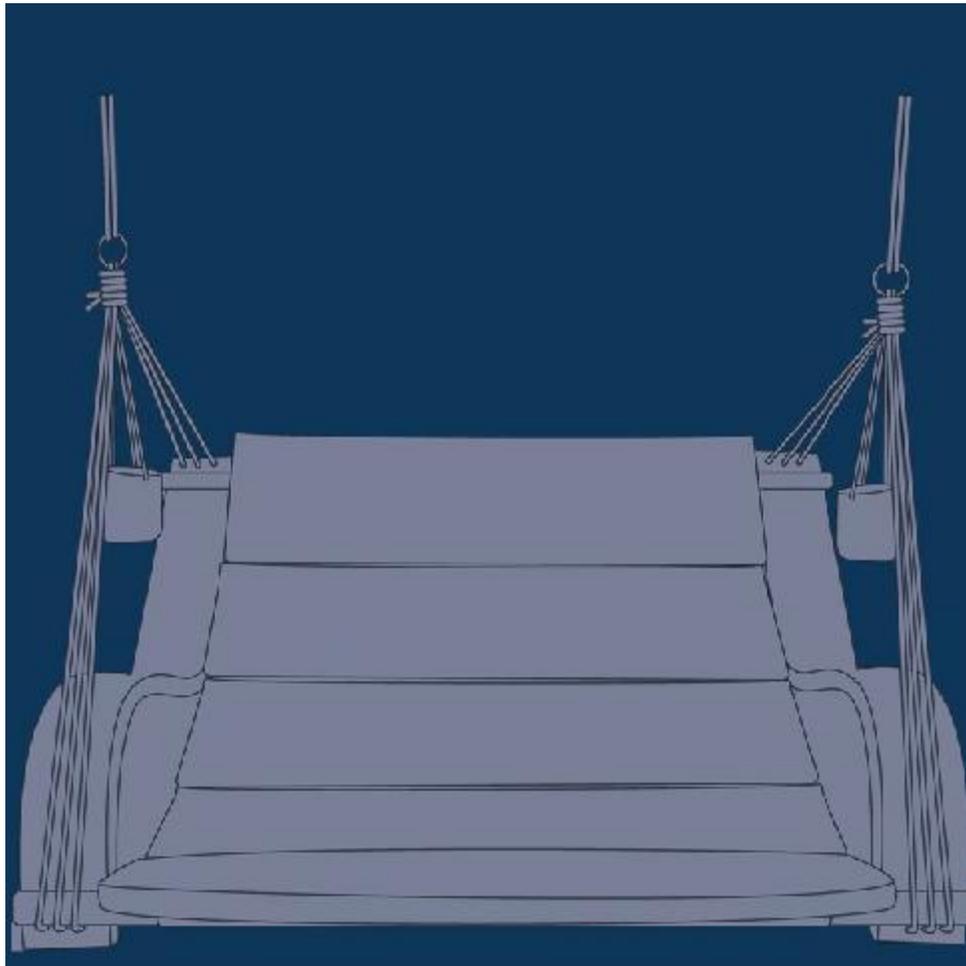

Regarding any questions about our products please contact your sales rep. or visit our website.

www.ezhangchairs.com